

HEAVY-DUTY FORKLIFT-KARRIERS

Models 285A-HD and 285AM-HD

Lift and Dispense a Drum with Your Forklift

Heavy-Duty Forklift-Karriers - 1500 Lb. Capacity

- Quickly mounts on your forklift
- No tools or truck modifications No electric or hydraulic connections
 - Provides controlled drum pouring
- IN USA

MADE

- Allows 360⁰ drum tilt control in both directions
- Eliminates backbreaking labor and dangerous, makeshift methods
- Model 285AM-HD has spark resistant parts
- Custom versions available

Morse Heavy-Duty Forklift-Karriers have a 20' long pull chain loop with 10' drop so you control drum tilting, 360° in either direction. Dispense a drum right from your forklift. Can also be ordered with Hand Crank or Hand Wheel option for use only within reach.

We recommend the MORStop Tilt-Brake option to automatically hold the drum tilt angle unitl you move it. This prevents a partially full, unbalanced drum from turning out of control, even when the contents shift from one end to the other.

'	MODEL #	HEAVY-DUTY FORKLIFT-KARRIER DESCRIPTION	OPTIONS TO HANDLE	ADAPTORS FOR SMALLER DRUM	SHIP WEIGHT
285A-HD Handle 55-gallon steel drum		Handle 55-gallon steel drum	Poly or fiber drum	55/30 Series	162 Lb.
2	85AM-HD	Spark Resistant Parts, handle 55-gallon steel drum	Poly or fiber drum	55/30M Series	162 Lb.

Video at www.MORSEmfgco.com

NEW Drum Handling System

· Automatically adjusts for 22" to 23.5" diameter drum Accepts Diameter Adaptors for your smaller drum Bolt-on Top Rim Clamp



or Bracket Assembly to handle a plastic or fiber drum

- Includes a flexible cover on the cinch chain to help protect the sidewall of your drum
 - · Incorporates alloy cinch chain and durable stress relief weld joints

Models 285A-HD & 285AM-HD

 Have chain wheel controlled tilt with 60:1 gear ratio and safety cover

Handle drum with drum faucet in place

 Have 1500 Lb. full-drum capacity (800 Lb. half-full* drum capacity).

Ship dimensions: L 40" W 29" H 24", class 70

* Half-full rating is an indication of capacity for tilting an unbalanced, bottom-heavy drum. A partially full drum with unbalanced and shifting load is harder to tilt than a full drum.

We recommend Option # 3900i-P

MORStop Tilt-Brake factory installed on

Bracket Assembly for rimless poly drum or to more securely handle a fiber drum



Installing the Bracket Assembly on your The Bracket Assembly provides a brace at top and bottom of your drum to prevent it from slipping lengthways through the drum holder. The Bracket Assembly is required to handle a rimless plastic drum. and recommended to more securely handle a fiber drum. It adjusts for 31" to 39" tall drum.

Part # 4556-P Bracket Assembly.

Part # 4556M-P Spark Resistant Bracket Assembly.

Top Rim Clamp for 55-gallon rimmed plastic or fiber drum

The Top Rim Clamp grips the upper rim

of your drum to prevent it from slipping

through the drum holder. Use to handle


a 55-gallon rimmed plastic or fiber drum.

To handle a 55-gallon plastic drum with

top rim, you must install either the Bracket

Assembly or the Top Rim Clamp.

Part # 4560M-P Spark Resistant Rim



MORCINCH Options



Diameter Adaptors insert into the drum holder to handle your smaller drum. Select the correct size

Diameter Adaptor for each drum (side 2). Spark resistant and stainless steel Diameter Adaptors are also available.



MORStop Tilt-Brake Kit for field installation.

Option X01-285HD Hand Crank with MORStop Tilt-Brake

Option X02-285HD Hand Crank. Option X03-285HD 16" Hand Wheel.

East Syracuse, NY 13057-0518

MORSE Mfg. Co., Inc. 727 West Manlius Street Phone: (315) 437-8475 • Fax: (315) 437-1029 • Email: nicepeople@MORSEmfgco.com • Website: www.MORSEmfgco.com

Part # 4560-P

Clamp Assembly.

Rim Clamp Assembly.

P.O. Box 518

Copyright 2008 - Morse Mfg. Co., Inc.

Spec Sheet F285A-HD







HEAVY-DUTY FORKLIFT-KARRIERS

Models 285A-HD and 285AM-HD

Diameter Adaptors

Model 55/30-19

Model 55/30-17.5

Diameter Adaptors allow your Heavy-Duty Forklift-Karrier to handle a smaller drum. Simply place the correct size Diameter Adaptor into the drum holder. When you complete dispensing from your smaller drum, simply lift the Diameter Adaptor out of the drum holder to return to handling a 55-gallon




drum.

Diameter Adaptors for 17.5" diameter and smaller drums have brackets at top and bottom of the drum. They adjust to securely hold a drum up to 38" tall.

Spark resistant and stainless steel Diameter Adaptors are available for the same diameter ranges.

DIAMETER ADAPTORS						
DIAMETER ADAPTORS	SPARK RESISTANT DIAMETER ADAPTORS	STAINLESS STEEL DIAMETER ADAPTORS	FITS DIAMETER	SHIP WEIGHT		
55/30-20.5	55/30M-20.5	55/30SS-20.5	20" to 20.5"	23 Lb.		
55/30-19	55/30M-19	55/30SS-19	18.5" to 19"	24 Lb.		
55/30-17.5	55/30M-17.5	55/30SS-17.5	17" to 17.5"	35 Lb.		
55/30-16	55/30M-16	55/30SS-16	15.5" to 16"	35 Lb.		
55/30-14.5	55/30M-14.5	55/30SS-14.5	14" to 14.5"	36 Lb.		

Dimensions

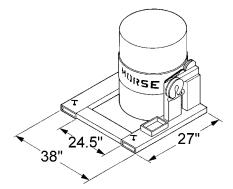

Fork pocket openings are 6.5" wide x 2.5" high.

Fork pockets are 26.5" deep.

Inside width between forks must be at least 24.5"

NOTE: Standard loop of pull chain extends approximately ten feet beyond the chain wheel. Custom lengths are available.



Steps for use of Heavy-Duty Forklift-Karriers

- 1. Drive your truck forks into the Heavy-Duty Forklift-Karrier's fork pockets.
- Dismount and screw down the safety locks to grip the forks.
- 3. Drive to a drum at ground level, so that the drum holder meets the center of your drum.
- 4. Secure your drum in the drum holder between drum ribs... no tools are needed. To secure drum, drape the cinch chain with flexible chain cover across the front of the drum, insert one link into the slot on the ratchet handle, and turn the ratchet handle clockwise to tighten the cinch chain around the drum.



MADE

IN

USA



- If your Heavy-Duty Forklift-Karrier is so equipped, tighten the Top Rim Clamp or adjust the Bracket Assembly height.
- 6. Raise your forklift carriage and the secured drum, then travel to the dumping location.
- To control turning of the drum without leaving your seat, pull the chain loop for complete control of drum tilting.
- 8. To remove drum from your Heavy-Duty

Forklift-Karrier, turn the ratchet handle clockwise to relieve pressure on the ratchet teeth, lift pawl handle to release teeth engagement, then rotate the ratchet handle counter clockwise to loosen the chain and allow its removal from the slot on the ratchet handle.

Please contact your Morse dealer







